

Restarting your inverter.



We have included some general instructions for restarting your inverter. **Please ensure you refer to your user manual prior to following these instructions as there could be variances to this method.**

1. Go to your switchboard and turn the Solar Supply Main Switch OFF.
2. Go to your inverter and turn the AC switch/es OFF.
3. Allow approximately 30 seconds and turn the DC switch/es OFF.
4. Wait for the inverter to power down. (All lights and the screen should be clearly off.)
5. Allow approximately 5 minutes.
6. Go to the switchboard and turn the Solar Supply Main switch ON.
7. Go to the inverter and turn the AC switch/es ON.
8. Turn the DC switch/es ON.
9. Allow time for the inverter to power up and initialise.

If the issue persists, we recommend consulting your inverter manufacturer for further advice.