

How to get started on the **nbn**[®] network with AGL.


First, check what's in the box's.

Check you have each of these ready:

- Ø Modem power cords (2)
- ✓ Telephone cable (1)

Once your **nbn** connection is confirmed, we'll send you an email letting you know it's time to complete the set-up of your modem.



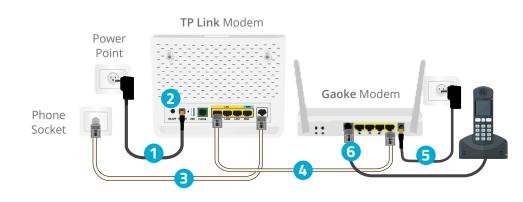

Now it's time to connect your modem.

Step 1

Connect the **TP Link** modem power cord into the back of the modem and into your power point. Turn the power on at the power point.

Step 2

Push the on/off button on the back of the **TP Link** modem.

Step 3

Then connect one end of the telephone cable to the DSL port on the back of your **TP Link** modem . Connect the other end to your Phone socket.

Note: **nbn** tends to activate one phone line within a property, so you may need to try several before you find the correct one. You'll know you've found the right one when the internet light is green, this can take 2-3 minutes.

Step 4

Connect the other ethernet cable into the TP Link Modem Lan 3 port and into the Gaoke Modem Land/Wan port

Step 5

Connect the **Gaoke Modem** power cord into the power point.

Turn the **Gaoke Modem** power on at the power point. Turn on the power on the power socket and switch the button on the side of the modem to on. The power light on your modem will go green.

Step 6

Connect your home phone to the port labelled Phone on the back of your **Gaoke Modem**

Step 7

Time to get connected.

To connect a WiFi device, you'll need the WiFi Network Name and the WiFi Password that is on the base of your <u>TP Link Modem</u>.

