

# How to get started on the **nbn**<sup>™</sup> network with AGL.

# First, check what's in the box.

Check you have each of these ready:

- Modems: Gaoke and TP Link

- ✓ Telephone cable (1)

# Next, find where your Network Termination Device (NTD) is.

Your Network Termination Device (NTD) is where you connect to the nbn network from inside your home.

It usually looks like a large box fixed on a wall, and for your Hybrid Fibre Coaxial **nbn** connection it should be connected to your standard coaxial port. Make sure you leave any cables installed by the **nbn** technician connected at all times.


Once you've found your NTD, you're ready to connect your modem to it. If you don't have or can't find your NTD, or you're having issues setting it up, let us know and we'll help sort it out.

Once your **nbn** connection is confirmed, we'll send you an email letting you know it's time to complete the set up of your modem.







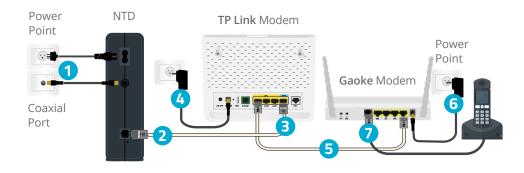

# Now it's time to connect your modem.

### Step 1

Check your NTD is plugged into a power point and connected to the Coaxial port in the wall.

### Step 2

Connect one end of the ethernet cable into the UNI-D 1 Port of the NTD. Connect the other end of the ethernet cable into the TP Link Modem yellow WAN port.

## Step 3

Connect the other end of the ethernet cable into the TP Link Modem yellow WAN port.

# Step 4

Turn the power on at the power point, and push the on/off button on the back of the TP Link Modem.

The modem lights will start flashing green as it starts up. When it's finished syncing, it will show two solid green lights and two flickering green lights. When the internet light is green, you can go to the next step.

## Step 5

Connect the other ethernet cable into the TP Link Modem Lan 3 port and into the Gaoke Modem Land/Wan port.

### Step 6

Connect the Gaoke Modem power cord into the power point.

Turn the Gaoke Modem power on at the power point. Turn on the power on the power socket and switch the button on the side of the modem to on. The power light on your modem will go green.

#### Step 7

Connect your home phone to the port labelled Phone on the back of your Gaoke Modem.

#### Step 8

Time to get connected.

To connect a WiFi device, you'll need the WiFi Network Name and the WiFi Password that is on the base of your TP Link Modem.

